

iGear[™]
.com.au

Bluetooth Speaker
IG1903



Overview

Top View

POWER BUTTON ON/OFF
PLAY/PAUSE (Short Press)
MODE BUTTON (Press Twice)

VOLUME DOWN (Hold Button)
PREVIOUS BUTTON (Short Press)

VOLUME UP
(Hold Button)
NEXT BUTTON
(Short Press)



Back View

MICRO SD CARD
INSERT



USB PORT

MICRO USB CHARGE PORT

1 Charging the Battery

This device has a built in, rechargeable battery.

Using the included Micro USB cable, plug the device into the USB port of a computer or a 240V USB charger.

The red indicator light will illuminate during charging.

If the device fails to charge, disconnect the device and try reconnecting again. Charging this device to full capacity can take up to 2 hours.

Once the device is fully charged, the blue light will illuminate.

When the battery power is running low the red light will illuminate and flash with a warning message emitting from the device repeating every five minutes.

2 Switch the Device on/off

To switch on, press the power button, an audible sound will be heard.

To switch off, press and hold the power button for up to 5 seconds, an audible sound will be heard.

3 Switch Modes

To switch modes, press twice on the mode button:

FM Radio Mode: To listen to FM Radio, simply select Radio Mode and choose your radio station by using the previous and next buttons.

Bluetooth Mode: Your new Speaker can be connected to any Bluetooth device.

AUX Mode: You can connect your speaker to an external drive via USB port or you can also play music from a Micro SD card.

4 Pairing Devices

Prior to pairing your devices, ensure your speaker is fully charged.

Activate the Bluetooth feature on your smart device as well as on your speaker. Please ensure to have nothing else plugged into your speaker. Once paired an audible sound will be heard.

On your smart device, select BT-IGEAR from the list of found Bluetooth devices. There will be a prompt sound from your speaker, you are now connected!

5 Troubleshooting

If you cannot connect the speaker to your device, try the following;

Ensure the speaker is fully charged, switched on & paired to your device.

Ensure Bluetooth is activated on your smart device.

Check to ensure your speaker is within 10m of your device and free of obstructions such as walls and other electronic devices.

6 Product Care, Maintenance & Warranty

Your Bluetooth speaker is an electronic device and should be treated with care.

Care Instructions:

- Keep all devices and accessories out of the reach of small children.
- Keep the device dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device gets wet, allow it to dry completely before use.
- To avoid the electronic components being damaged, do not store or use your device in wet or dusty areas.
- Do not store the device in environments with extreme heat or cold temperatures.
- Do not drop, knock or shake the device. Rough handling can break internal circuit boards and fine mechanics.

Neglecting to follow the above instructions for product care and maintenance may void the manufacturer's warranty.