

50.00 mm


60.00 mm

**iGear** TRUE WIRELESS EARBUDS  
ITEM NO: IG1915



Search Code: iGear-IG1915

Product diagram

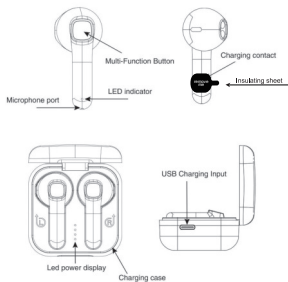

**Packing list**

IG1915 TWS earphones  
Earphones charging case  
Type-C charging cable  
Instruction manual

**Product specification**

Product model: IG1915  
True wireless version: V5.0  
Battery specification: earphone 3.7V  
Supported mode: HSP, 1.2, HFP, 1.3, A2DP, 1.3, AVRCP, 1.5  
Sensitivity: 42dB/mW  
Signal distance: 10 m (in an ideal environment without any large obstacles)  
Playing time: about 2-3 hours  
Talk time: approximately 2-3 hours  
Standby time: about 400 hours  
Charging time: about 45-60 minutes

**Functional instructions**

- Power On:**
  - Take the earphones out of the charging chamber and long press the left and right multi-function buttons for 3 seconds.
  - The voice commands will note "Power on"
  - Blue and red light will flash alternately.
- Power Off:**
  - Place the earphones in the charging case and they will be turned off automatically.
  - The voice commands will note "Power off"
  - Red light will long flash to signal power off.
  - Alternatively, earphones can be switched off by hiding down multi-function buttons for 8 seconds. In this instance the voice command will note power-off and the red light will flash 3 times.
- Pair one-time only:**
  - Once paired for the first time your earphones will remain paired and automatically reconnect with any paired devices.
- Play/Pause:**
  - Short Press Play: Blue light will flash slowly.
  - Short Press Pause: Blue light will flash slowly.

- Switching Songs:**
  - Triple Press the left earphone multi-function button to play the last song.
  - Triple Press the right earphone to play the next song.
- Volume Up/Down:**
  - Double click the left earphone multi-function button to increase volume.
  - Double click right earphone multi-function button to decrease volume.
- Call Answering:**
  - Incoming calls can be answered by pressing either the left or the right multi-function buttons.
- Call Ending:**
  - Calls can be ended (Hang-Up) by pressing either the left or the right multi-function button.
- Call Rejection:**
  - Incoming calls can be rejected by pressing both the left and right multi-function button for 2 seconds.
- Voice Assistant:**
  - Activate Siri or Google voice assistant by pressing the right multi-function button 3 seconds.
- Low Battery Alert:**
  - When the batteries of the earphones are running low a warning chime will sound every 20 seconds. If left uncharged this will stop when batteries are completely discharged.

**Pairing Method**

- Initial Pairing:**
  - When earphones are removed from the charging case both flash blue/red continuously.
  - After approx. 8 seconds one will stop flashing whilst the other will continue flashing slowly, your earphones are ready to pair with your device.
  - Search for iGearIG1915 from your devices list of available Bluetooth devices and pair.
  - Once paired your device will prompt "Connected" and the main earphone will continue to slowly flash blue.

- When unpaired from your device both earphones will once again flash blue/red continuously.

**Charging Method**

- Please ensure insulating sheets are removed prior to charging
- Charging your earphones:**
  - To charge your earphones simply place them back into the charging case.
  - When charging your earphones, the earphone will show a red light
- Charging your earphones case:**
  - Insert the Type-C USB cable into a power source and the charging case. Light flashing

**Precautions**

- Always charge your charging case in a safe environment.
- Once fully charged disconnect the USB Type-C power cable from the case to avoid any possible long-term damage caused by overcharging.
- Improper use of high volume could cause hearing damage.
- Do not use or place your earphones or charging case in corrosive environments.
- Bluetooth signals can be compromised if near sources of interference.

**iGear®**